

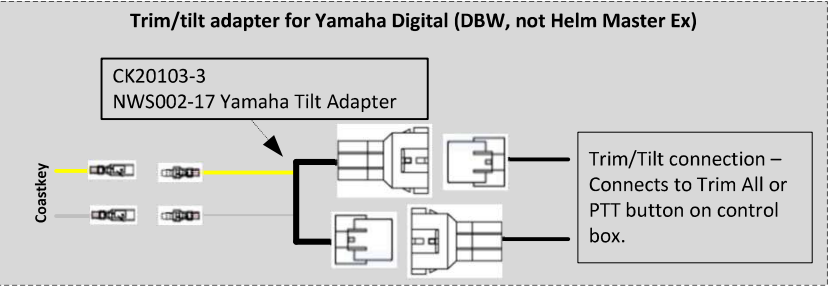




Yamaha Mechanical and Digital (DEC): Single Premium Installation without key switch – C0142-3

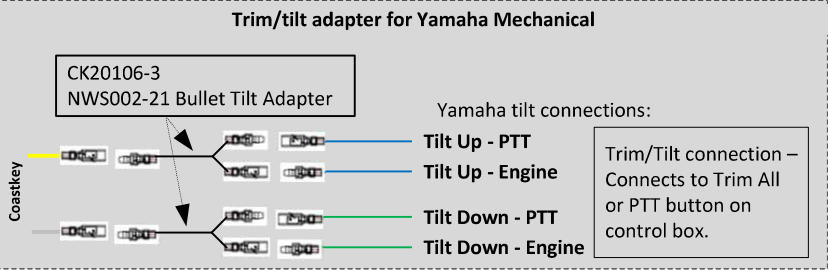

Date	Drawn by	Scale
08.04.2025	Pål Sørensen	-
Item name		
CoastKey Yamaha Single Premium Installation without key switch (Mechanical + Digital)		
Item number		Rev.
NWS021-01-02-03 (C-Kit: C0142-3)		A

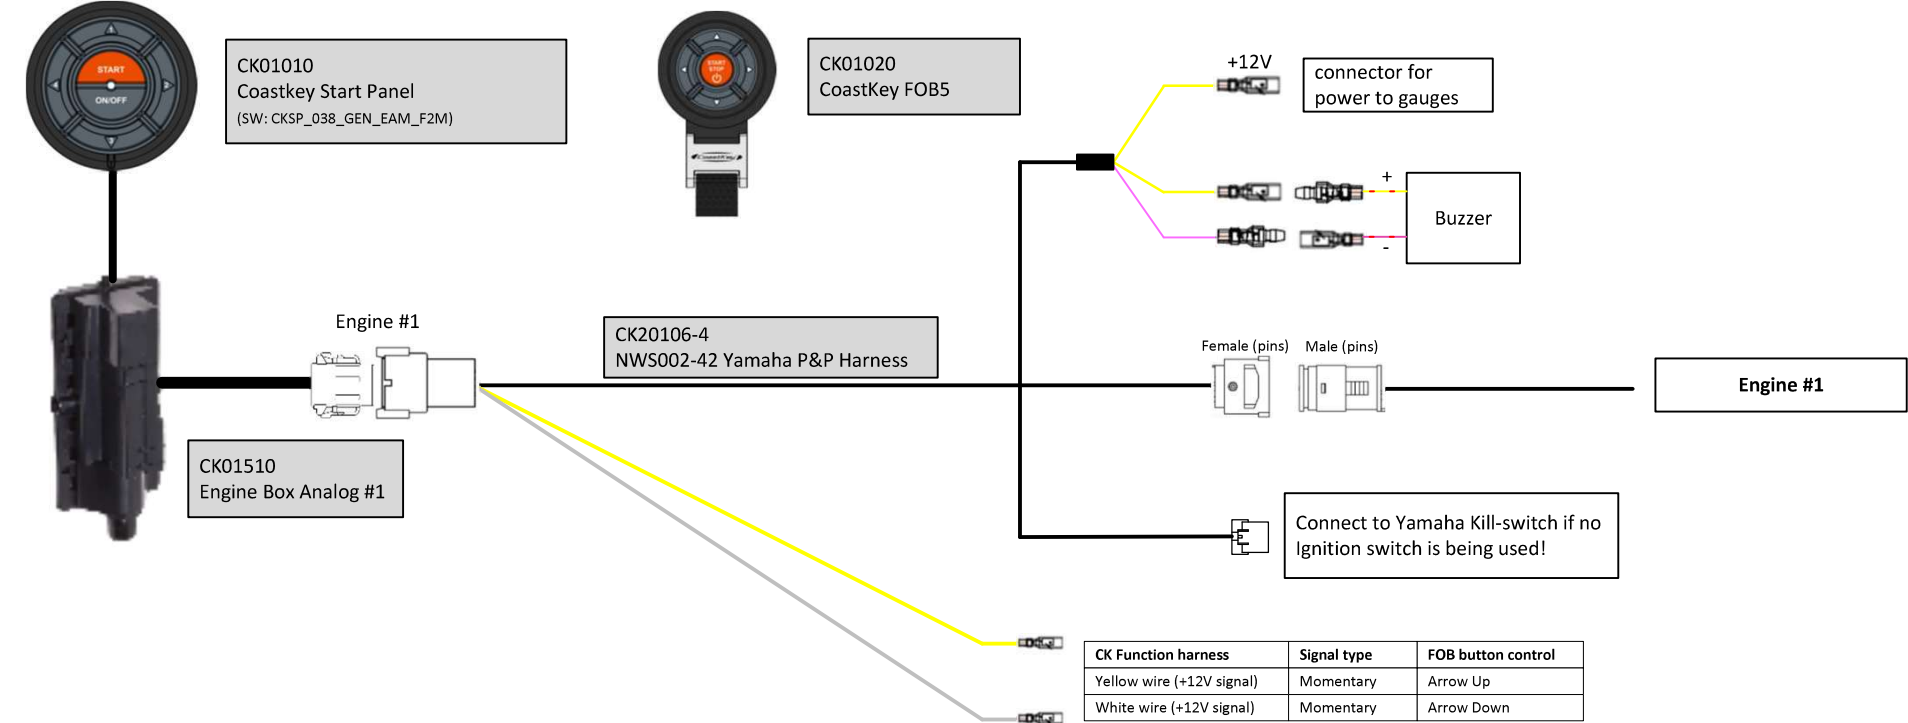

Modification of Ignition Key Switch!

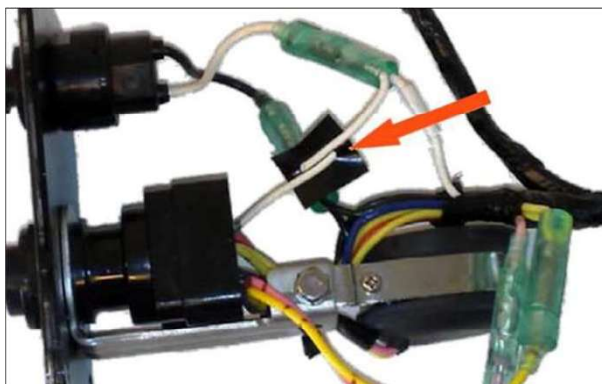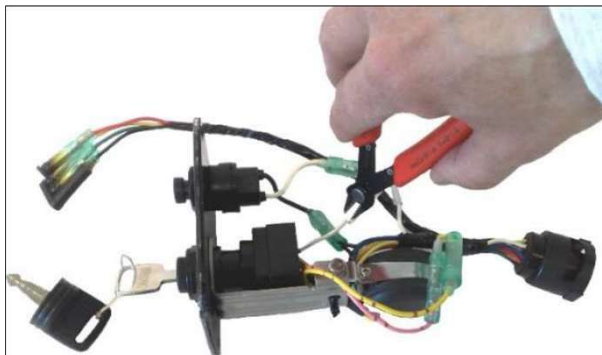

NOTE!

If the key switch is being used, find the white wire from the ignition switch. This wire ends up in a split.

Cut the white wire between the ignition switch and the split. A good rule is to cut it about 20mm from the ignition switch, then it is possible to repair it later. Isolate both of the loose wire ends.

Date	Drawn by	Scale
16-04-2020	Pål Sørensen	-
Item name		
CoastKey Yamaha Ignition Switch Modification (DBW and Mechanical)		
Item number		Rev.
NWS021-30		A